


# Clamp Mounted Sneeze Guard Setup Instructions

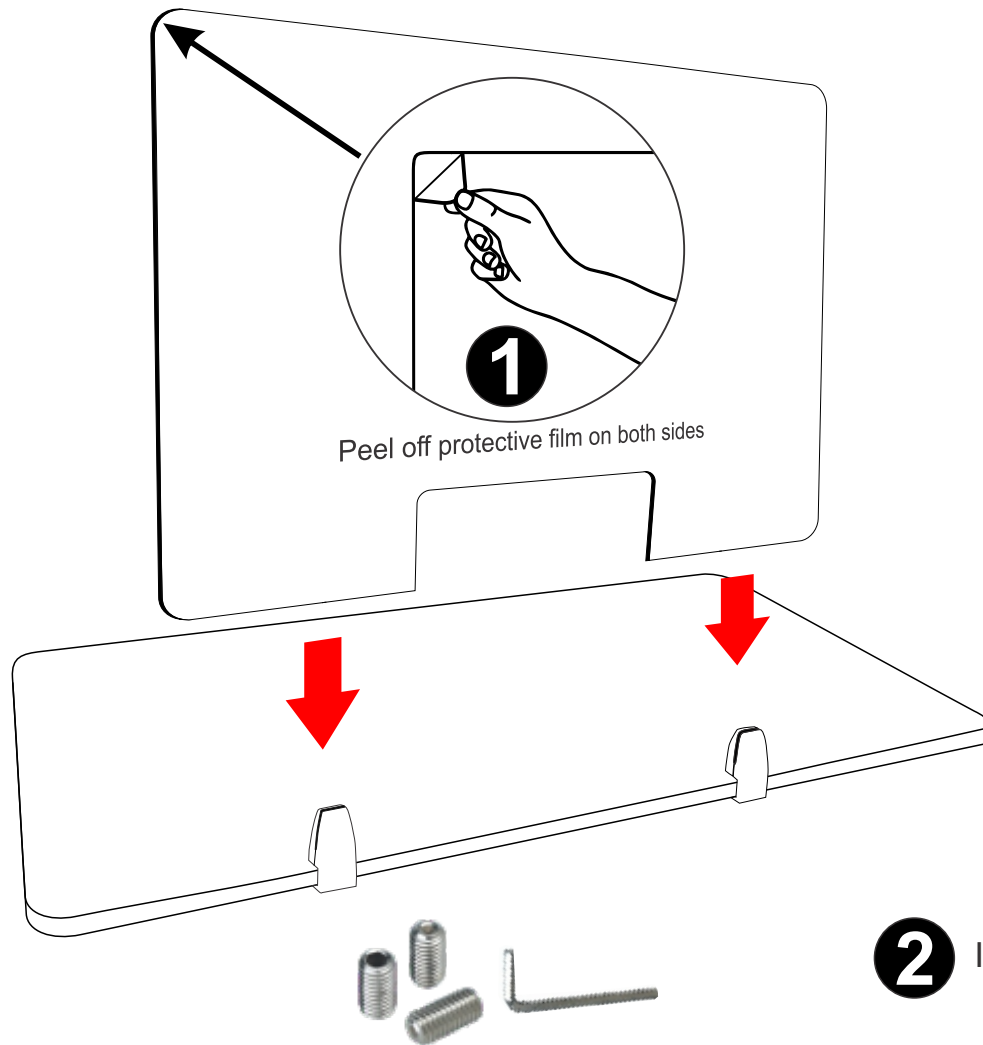

Clear acrylic spacer

2 Install two brackets using allen keys supplied